



"This is the one - Advanced Made Simple"

INTRODUCTION

The DNA ONE is designed to be the simplest, most reliable vaping device available. Powered by Evolv's legendary DNA chipset, it prevents burnt tastes automatically - so every puff tastes exactly as it should.

No settings to learn. No mistakes to make. Just enjoy.

ABOUT EVOLV

Evolv LLC is an American electronics company based in Hudson, Ohio, and the team behind some of the most important innovations in vaping technology. They invented temperature control vaping, and hold patents on wattage control, temperature control, and Replay - the technology that lets you save and repeat your perfect puff.

Every DNA ONE is powered by Evolv's own chipset, designed and engineered in the USA. It's the same technology trusted by premium device manufacturers worldwide, now in a complete pod system built from the ground up by Evolv themselves.

REPLAY TECHNOLOGY

Replay is an Evolv-exclusive feature. When you take a puff you particularly enjoy, double-click the Replay button to save it. The DNA ONE will reproduce that exact puff every time - same flavour, same warmth, same draw - until you turn it off.


Note: Replay operates independently of temperature control. Dry hit prevention remains active at all times regardless of Replay state.

ALWAYS-ON TEMPERATURE CONTROL

The DNA ONE chip monitors coil temperature continuously throughout every puff. If the coil approaches the dry-hit threshold, the device reduces power automatically before you taste it. There is no manual temperature setting required.

This system works alongside Protect to deliver consistent flavour and maximum pod lifespan without any input from the user.


DEVICE OVERVIEW

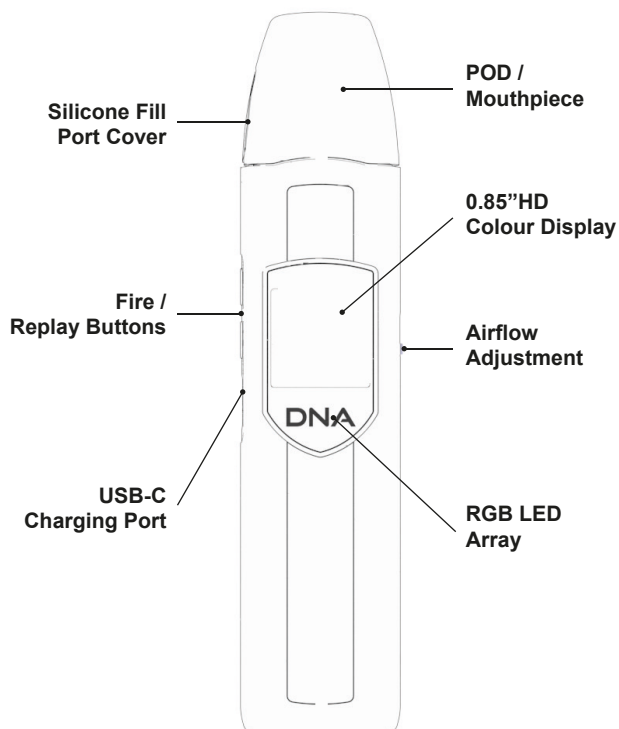

QUICK START


1) Insert the Pod

Remove the device from packaging. Peel off the adhesive seal on the bottom of the pod before use.

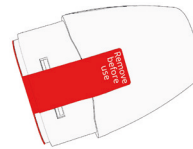


2) Fill the Pod

Tilt the device. Insert your e-liquid nozzle into the fill port on the side of the pod and fill slowly. Do not overfill. Replace the silicone seal when done.

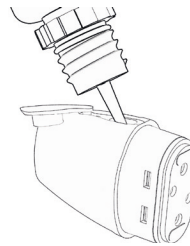


3) Unlock the Device

Click the fire button five times to unlock the device. The display will confirm. Click five times again to lock.

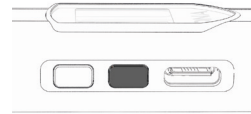

4) Fire

Hold the fire button while inhaling, or simply draw on the mouthpiece.

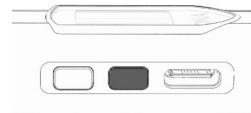


5) Adjust Airflow

Use the airflow dial on the side of the device to adjust draw resistance. Tighter for a mouth to lung draw, more open for a direct lung hit.




6) Replace the Pod

When the pod is empty or the coil is spent, pull the pod upward to remove it from the magnetic bay. Insert a new pod.

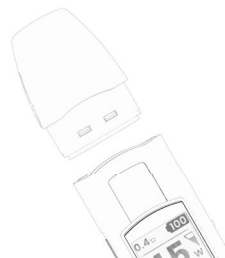

BUTTONS & MENU

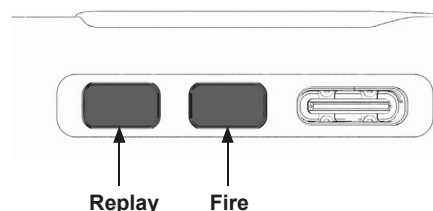


BUTTON SHORTCUTS

ACTION	FUNCTION
Fire Button x5	Lock / Unlock
Replay Button x2	Activate / deactivate replay mode
Fire Button x3	Adjust wattage

Adjustment Menu

Press the Fire button 2x to open the adjustment menu. Menu items cycle automatically - press Fire when the item you want is highlighted to select it.

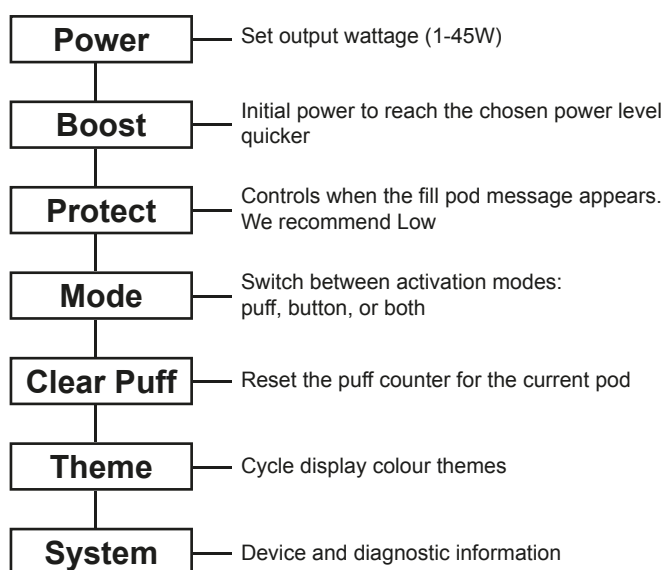

1. General Information

- The sale to and use of e-cigarettes by persons under 18 years of age is prohibited.
- This user information applies both to the use of our nicotine-containing and nicotine-free liquids in PIPELINE e-cigarettes.
- For technical specifications and the correct handling of your device, please refer to the operating manual.

2. Handling of Lithium-Ion Batteries (Li-Ion)

- Li-Ion batteries must never be short-circuited. If you intend to transport or store individual cells, always and exclusively use suitable storage containers.
- Never throw Li-Ion batteries into liquids or fire.
- Do not expose Li-Ion batteries to extreme temperatures.
- Never use damaged Li-Ion batteries or batteries with damaged insulation.
- Use only suitable chargers.
- Never charge Li-Ion batteries unattended.
- Use only cells of the correct type with sufficient current-carrying capacity.
- Dispose of Li-Ion batteries only at suitable collection points.

3. Instructions for Use and Storage

- Always keep e-cigarettes and liquids out of the reach of children and pets.
- Use only compatible refill systems, connection types and spare parts.
- Operate your PIPELINE e-cigarette only within the recommended power ranges.
- Never open a device unless this is expressly mentioned and explained in the user information.

4. Contraindications

We have no studies on our products that would indicate any contraindications. However, we recommend consulting your doctor before first use in the case of:

- previous serious or moderate illness
- chronic complaints
- known allergies to ingredients (see refill container)
- taking strong medication

5. Warnings for Vulnerable Consumer Groups

- The use and supply of e-cigarettes and liquids to children and adolescents is prohibited.
- The use of e-cigarettes and liquids by non-smokers is not recommended.

- The use of e-cigarettes and liquids during pregnancy and breastfeeding is not recommended.

6. Information on Possible Adverse Health Effects

We have no studies on our products that would indicate adverse effects on health. However, this does not mean that adverse health effects can be ruled out. Please also note our information on contraindications, the warnings for vulnerable consumer groups and the information on the addictive effect of nicotine.

7. Information on the Addictive Effect

If you use nicotine-containing liquid in your PIPELINE e-cigarette, please note the following warning: "Nicotine is a substance that is highly addictive."

8. Toxicological Data

At the time of delivery, this device contains no harmful substances. However, if you use nicotine-containing liquid in your e-cigarette, please also note "7. Information on the Addictive Effect".

9. EU Declaration of Conformity

PIPELINE GmbH hereby declares that the product complies with the essential requirements and other relevant provisions of Directives 2014/30/EU (EMC) and 2011/65/EU (RoHS).

10. Disposal

The crossed-out wheellie bin symbol means: waste electrical and electronic equipment must not be disposed of with household waste. Consumers are legally obliged to hand in old devices at suitable collection points, separately from household waste. Remove the battery from the device before handing it in and dispose of it separately at a collection point for used batteries. Tape over the battery terminals to prevent short circuits and fires.

You can hand in old devices free of charge at the collection points of the public waste disposal authorities (recycling centres) and at retailers who are obliged to take them back, as well as in all PIPELINE Stores. You are responsible for deleting any personal data on old devices yourself. Old devices contain valuable raw materials that are recycled.

The environment and PIPELINE say thank you!

11. Statutory Warranty and Manufacturer's Guarantee

2-year statutory warranty. In addition, PIPELINE GmbH (address: see Contact) grants a 1-year manufacturer's guarantee from the date of purchase covering material and workmanship defects. The guarantee expires if the device is opened (loosening the screws). Your statutory warranty rights remain unaffected by the guarantee.

12. Contact

PIPELINE GmbH
Pernerkrepp 11
81925 Munich, Germany

Tel.: +49 89 54 84 76 63

support@pipeline-store.net
www.pipeline.de

WEEE Reg. No. DE10791500

Technical Specifications

Output Power	1-45W
Display	0.85" HD Colour TFT + RGB LED Array
Battery	1300mAh
Charging	5V/2.6A, USB-C
Body Material	Zinc Alloy
Pod Capacity	2ml (TPD) / 3ml
Resistance Range	0.2-3.0 Ohm
Dimensions	114.5 x 25 x 15mm
Weight	97g



Engineered in the United States by:

Evolv Inc, 5171 Hudson Dr, Hudson, OH 44236
USA. www.evolvapor.com, sales@evolvapor.com

Contract manufactured under exclusive agreement by:
Shenzhen Innokin Technology Co., Ltd. 1st-5th Floor, Building 6, Xinxintian Industrial Park, Xinsha Road, Shaer Community, Shajing, Baoan District, 518104, Shenzhen, China

Production Licence: 5144030162

UNDERAGE SALE PROHIBITED -
KEEP OUT OF REACH OF CHILDREN



- Δεν πρέπει να περιέλθει στα χέρια παιδιών και εφήβων.
- Keep out of reach of children.



- Συμβατότητα με σταγονόμετρο.
- Dropper compatibility.